


HOW TO CHANGE YOUR BATTERY

GREASEPAK **Mk 1** & **Mk 2** MODULES

GREASEPAK
manufactured by **MECHLINE**

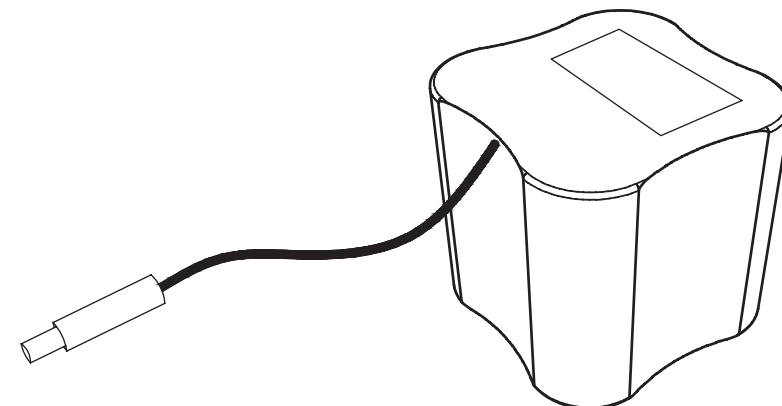


ABOUT YOUR GREASEPAK REPLACEMENT BATTERY



This battery pack is for use only with Mechline's GreasePak battery operated, biological drain maintenance systems.


- **Product code:** GP-BP
- **Type:** Alkaline
- **Voltage:** 6V (Nominal)
- **Manufacture date:** *This will be printed on the battery pack label.*
- **DO NOT:** Short circuit, disassemble, incinerate or charge this battery pack.
- **DO:** Observe correct polarity
- **Service life:** Approximately 12-24 months
- **Warranty:** Battery packs are basic 'consumable' goods and not subject to warranty.

This leaflet contains an easy step-by-step guide on how to change your battery. The section you need will depend on which dosing module you have installed.

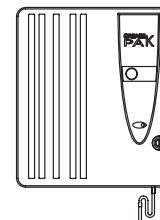

Does your GreasePak module look like this?



See **page 2** for how to change your battery.

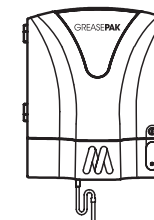


Does your GreasePak module look like this?

See **page 3** for how to change your battery.


Page 2. BATTERY CHANGE INSTRUCTIONS FOR - **Mk 1 MODEL**

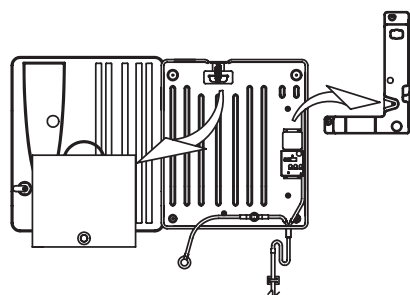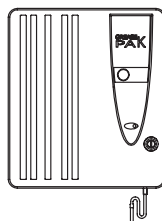


- 2.1 Open the dosing unit door and remove the fluid box.
- 2.2 Carefully remove the electronics cover and store safely.

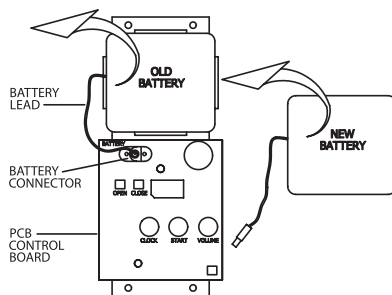


- 2.3 Unplug the battery pack connector on the PCB and carefully remove the old battery pack from the mounting bracket.
- 2.4 Fit the replacement battery pack and plug into the PCB.

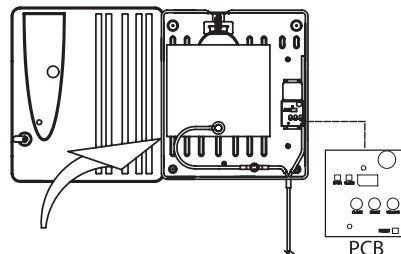

- 2.5 Hang the fluid box in the dispenser. Follow the box instructions to connect.
- 2.6 Press the **RESET** button on the PCB.

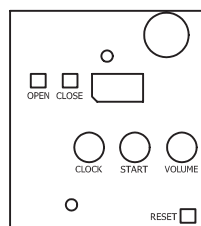



- 2.7 PRESS & HOLD the **CLOCK / START / VOLUME** buttons one at a time to set desired values.
CLOCK = Time now (set to nearest hour using a 24hr clock)
START = Dosing time (factory set at 01:00 but ideally set one hour after kitchen stops using water)
VOLUME = Dosing volume (factory set at level 2)
- 2.8 Press **OPEN** then **CLOSE** buttons on the PCB. Listen for audible 'click' to confirm new battery is working. Green fluid should flow when **OPEN** is pushed and stop when **CLOSE** is pushed.
IMPORTANT: Press **CLOSE** last.

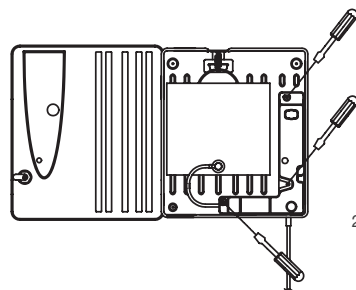


- 2.9 Refit the electronics cover. Check the fluid box can move up and down freely. Close the dosing unit door.




Page 3. BATTERY CHANGE INSTRUCTIONS FOR - **Mk 2 MODEL**

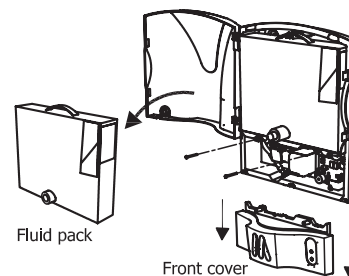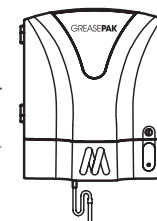


- 3.1 Open the dosing unit door and remove the fluid box.
- 3.2 Remove the 2 screws that secure the front cover. Carefully pull the front cover downwards to remove.

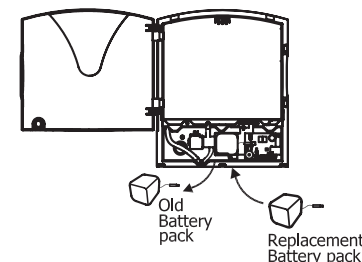


- 3.3 Unplug the battery pack connector on the PCB and carefully remove the old battery pack from the mounting bracket. *NB: If transit plastic tie is still in place, either cut or pull off to remove. There is no need to replace.*
- 3.4 Fit the replacement battery pack and plug into the PCB.

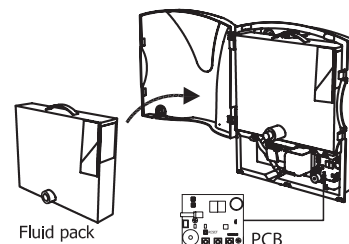

- 3.5 Hang the fluid box in the dispenser. Follow the box instructions to connect.
- 3.6 Press the **RESET** button on the PCB.

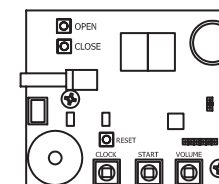

- 2.7 PRESS & HOLD the **CLOCK / START / VOLUME** buttons one at a time to set desired values.
CLOCK = Time now (set to nearest hour using a 24hr clock)
START = Dosing time (factory set at 01:00 but ideally set one hour after kitchen stops using water)
VOLUME = Dosing volume (factory set at level 2)
- 2.8 Press **OPEN** then **CLOSE** buttons on the PCB. Listen for audible 'click' to confirm new battery is working. Green fluid should flow when **OPEN** is pushed and stop when **CLOSE** is pushed.
IMPORTANT: Press **CLOSE** last.

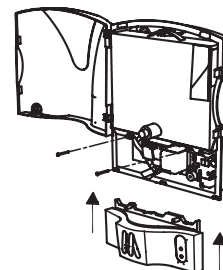

- 3.9 Refit the front cover and secure with 2 fixing screws. Close the dosing unit door.

